

Eyecloud OpenNCC USB Driver

Installation Guide

June 2021 Revision 1.0.0



修订历史

Version	Date	Editor	Description
1.0.0	June 2021	Zed	



目录

修订历	史	2
第一章		,
第二章	安装步骤	



第一章 介绍

该手册用于介绍在运行 OpenNCC Software Development Kit 之前如何安装平台(Windows)所必须的 USB 驱动程序。

第二章 安装步骤


- 1. Connect the device and check the device manager of the PC.
- 2. Then click the button 'Get device info' on OpenNCC View。
- 3. It shows that the driver is not installed now, in the picture below, there are exclamation points .




4. Open the driver installer, click the 'Options -> List All Device', then select the VSC Loopback Device.


zadig-2.5.exe

- 5. The USB ID will be automatic recognized, choose to install the driver WinUSB and execute 'Install Driver'.
- 6. If you are warned that antivirus software will prevent installation, please select Allow this installation.

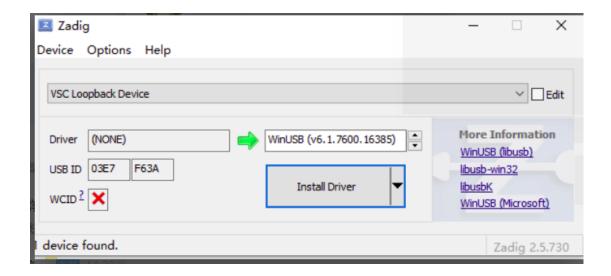



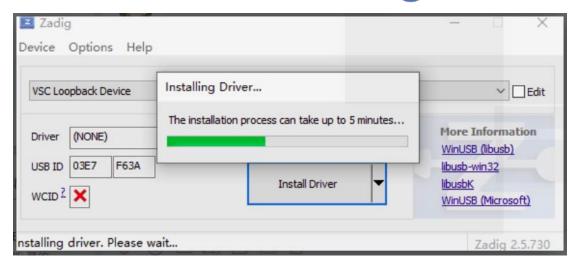

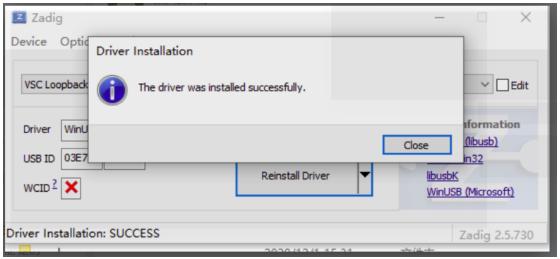

7. Check the device management again, the device driver is installed successfully.



8. After clicking "Get Device Info", if the device cannot be opened, please open the device manager of the computer and confirm the driver status. If the driver is not installed, then re-install the driver to run the device.

**Note:

Use Zadig tools may need to disable driver signature enforcement on win10 system and exit antivirus software.